

LE•MEGA

LIVE & ALOUD

DTS4 MUSIC BOX



Owner's manual

Important Safety Instructions

 
1. Read these instructions
2. Keep these instructions
3. Heed all warnings
4. Follow all instructions
5. **WARNING** – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture
6. Clean only with a dry cloth
7. Only use attachments/accessories specified by the manufacturer
8. Unplug this apparatus during lightning storms or when unused for long periods of time
9. Keep this product a safe distance away from naked flame, such as a lit candle
10. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus
11. Put the remote controller in the fuselage when it is not in use
12. Don't press more than one key at the same time
13. In the event that the unit malfunctions, unplug it for 3 seconds, then plug in again

Packed with your DTS 4 you should find:


- 1 Power cord
- 1 Remote Control
- 1 Owner's manual
- 1 Warranty Card

Guide To Features(Top, wireless charging on the top)

Put your phone that supports wireless charging in the wireless charging area until the mobile phone is prompted to charge.

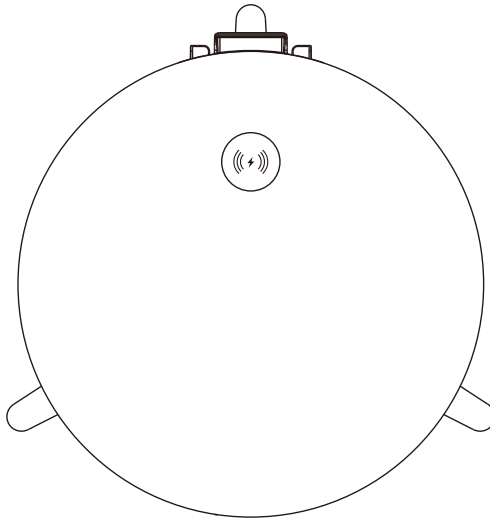


Front display

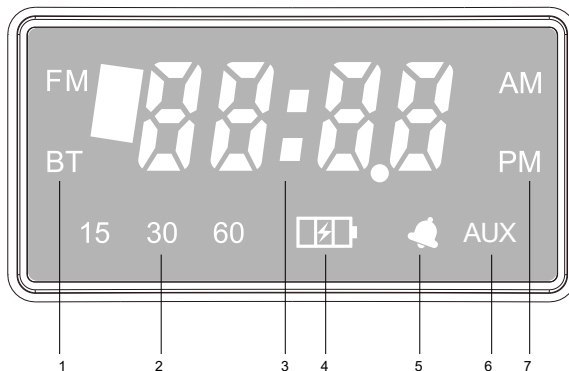 

1. Different models switch between Bluetooth, FM and Aux in mode.
2. Time interval 15mins/30mins/60mins/Sleep Off in turn.
3. Time display.
4. Battery charging status.

5. Alarm setting.
6. AUX IN mode.
7. Switch between AM and PM.

 
Back overview

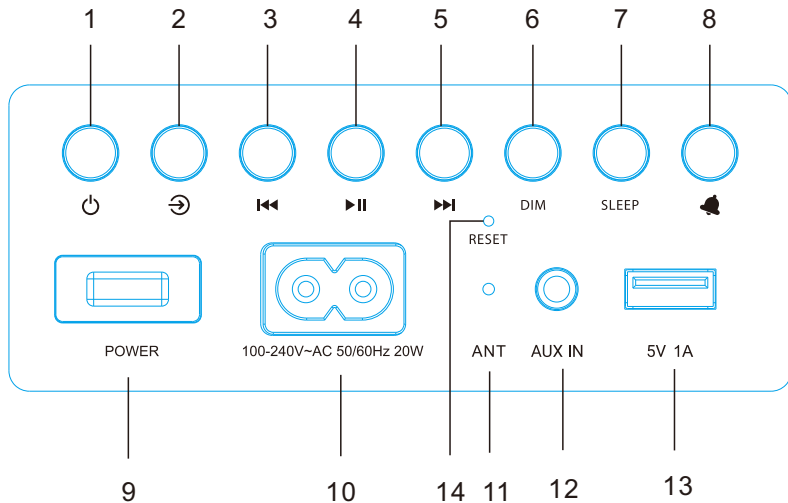

1. : Briefly press to power on and Standby, Press and hold to Power off.
2. : Briefly press to switch between BT/FM/AUX IN mode.
3. : In Bluetooth mode, briefly press to previous track, press and hold to volume down; In FM mode, briefly press to backward forward 0.1MHz frequency.
4. : In Bluetooth mode, briefly press to Play and Pause; In FM mode, press and hold to auto-scan the stations, briefly press to switch the preset stations.
5. : In Bluetooth mode, briefly press to next track, press and hold to volume up. In FM mode, briefly press to forward 0.1MHz frequency.
6. DIM : Press to adjust the LCD brightness level at High/Mid/Low in turn.
7. SLEEP : Press $15 \overset{30}{\circlearrowleft} 60$ to set the time interval 15mins/30mins/60mins/Sleep Off in turn.


8. **Alarm:** Briefly press 🔔 to activate or deactivate the alarm function, Press and hold 🔔 to start alarm setting;
When the hours flash, use the previous/next track button to set the hours then press 🔔 to confirm and continue;
When the minutes flash, use the previous/next track button to set the minutes, press 🔔 to confirm and finish the setting.
When alarm is ringing, press any button on the device or the remote to go to Snooze, after 5 minutes, alarm will ring again, and then press the 🔔 to close the alarm;
9. **Power switch :** Press to Power on and Power off.
10. **Power input(100-240V).**
11. **ANT:** Wire antenna.
12. **AUX IN :** To connect external MP3 music source.
13. **5V/1A :** 5V/1A for mobile charging.

 Bottom overview

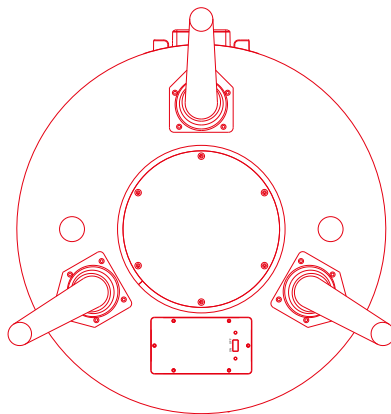



 1. ON/OFF Battery Slide Switch: Slide at ON position to power on the unit. Slide at OFF position to power off the unit.

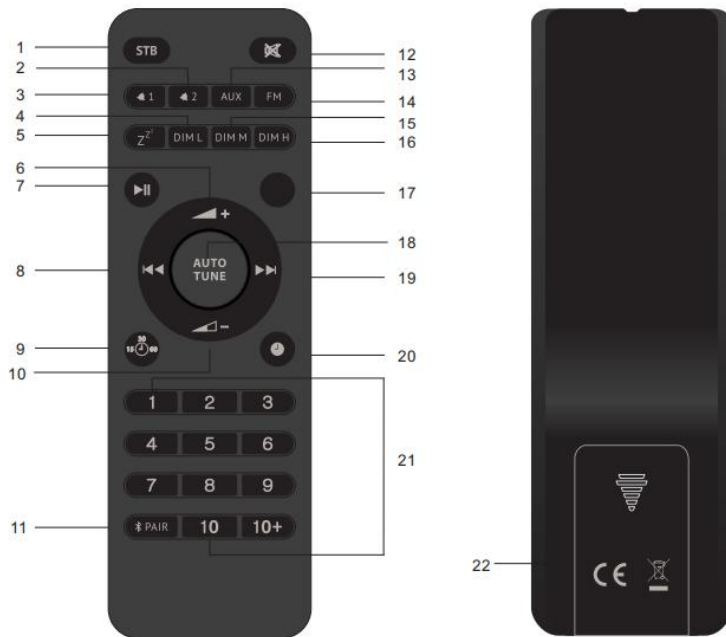
Remote Control



1. **STB (Standby):** Briefly press to power on and Standby, Press and hold to Power off;
2. **Alarm 2:** Briefly press to activate or deactivate the alarm function, Press and hold to start alarm setting.

When the hours flash, use the previous/next track button to set the hours, press  to confirm and continue.


When the minutes flash, use the previous/next track button to set the minutes, press  to confirm and finished the settings.

When alarm is ringing, press any button on the device or the remote to go to Snooze, after 5 minutes, alarm will ring again, and then press the  to close the alarm.

3. **Alarm 1 :** Same operation as Alarm 2.
4. **DIM L:** Press DIM L to adjust the brightness at Low.
5. **Z^z Snooze:** Press the button to snooze a set time when alarm sounding.
6. **VOL+:** Briefly press Vol+ button to increase the volume;
7. **▶|| :** In Bluetooth mode, briefly press to Play and Pause;
8. **◀◀ :** In Bluetooth mode, briefly press to previous track;

In FM mode, briefly press to backward 0.1MHz frequency, Press and hold to scan stations;

9. **SLEEP**: Press $15 \overset{30}{\text{⌚}} 60$ to set the time interval 15mins/30mins/60mins/Sleep Off in turn before the unit is set to Standby mode;
10. **VOL-** : Briefly press Vol- button to decrease the volume;
11. **PAIR** : In other modes, briefly press the BT button to access Bluetooth mode directly. In Bluetooth mode, Press this button to disconnect BT connection;
12. **MUTE**: Press once to mute the sound when playing. Press again to un-mute the sound;
13. **AUX** : In other mode, Press AUX to enter AUX mode directly;
14. **FM** : In other modes, briefly press to access FM mode directly;
15. **DIM M** : Press DIM M to adjust the brightness at middle.
16. **DIM H** : Press DIM H to adjust the brightness at high.
17. No function for this button.
18. Press Auto Tune button to auto-scan the stations under the FM mode and save the strong signal stations automatically. Play the first saved station after finishing full scan.
19. **▶▶** : In Bluetooth mode, briefly press to next track; In FM mode, briefly press to forward 0.1MHz frequency, Press and hold to scan stations.

20. **CLOCK**  : Press and hold to start the time setting;

When the hours flash, use **◀◀** / **▶▶** to set the hours, press **CLOCK** to confirm and continue; When the minutes flash, use **◀◀** / **▶▶** to set the minutes, press **CLOCK** to confirm and continue;





Note: If the time stops flashing while setting, repeat the above steps.

21. **1-10+** : In FM mode, Long press number 1 to number 10+ to save the favorite stations [Total can preset 20 stations]; Short Press number 1 to number 10+ to select the favorite station or Preset recall;

Remark: As the remote is sharing with other models, number 17 can't be used for DTS4.


 

22. Battery compartment .

FM RADIO

1. Press  button on the unit or press "FM" button on the remote to enter to FM mode;
2. Briefly press  /  to move backward /forward each 0.1MHz frequency to search stations. Or press AUTO TUNE button on remote control to auto-scan the active stations and save the strong signal stations automatically;
3. Press  : press the PLAY button to switch the saved stations from low frequency to high frequency;


Noted: To get a good radio signal, fully unwind antenna and move it around until you get good reception.

BLUETOOTH

1. Turn on device, Press  button on the unit or press  PAIR button on the remote to enter to Bluetooth mode;
2. Select Bluetooth device name "LEMEGA DTS4" when it appears on your device's screen to initiate searching;
3. You can start to play your music files wirelessly. Adjust the volume level on your device;
4. Press  PAIR button on the remote control to disconnect Bluetooth.

AUX IN

Aux in mode plays audio from an external source such as MP3 player.

1. Turn on device, Press  button on the unit or press "AUX" button on the remote to enter to AUX mode;
2. Connect the external audio source to the Aux in socket;
3. Adjust the volume level of the device (and, if necessary, the audio source device) as required.

SPECIFICATIONS

Model: DTS4

Type: MUSIC BOX

Drivers: 2 x 3" full range drivers +2 x 1" tweeters

Power output: RMS 30W

Wireless charging output: 10W

Power Supply: 100-240V or 4400mAh/11.1V Lithium battery.

Dimensions: L380*W380*H576 MM

Weight: 8.0kg

Specifications are subject to change without notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

LE•MEGA

LIVE & ALOUD

DTS4 MUSIC BOX

If you have any questions or suggestions,
please share with us.

info@lemegaaudio.com
www.lemegaaudio.com



MADE IN CHINA